
Installation Guide - GreaseShield®1000-PF




- servicing purposes (5.9"/150mm minimum).
- Inlet Pipe 11/2"/40mm: To be piped with a sufficient fall of no less than 1 in 40.
- Outlet Pipe 2"/50mm: To be piped with a sufficient fall of no less than 1 in 40.
- Pre-Filter: Ensure sufficient height above the Pre-Filter to allow for removal and daily maintenance of Pre-Filter basket.
- Pre-Filter Basket: A Pre-Filter basket must be installed into the pre-filter at all times.
- Pre-Filter Support Bar: The support bar must be installed when attaching the Pre-Filter
- Pre-Filter Adaptor Bracket: To be fixed onto the top of the GS1000 unit so that the Pre-Filter can be mounted.
- Vortex Flow Controller: Must be fitted to the Pre-Filter inlet connection.
- Sampling Point: Connected to the outlet of the unit: it is essential in the analysis of effluent leaving the unit.
- Running Trap: The outlet of unit must be fitted with a running trap to reduce foul smells.
- FOG Container: Ensure that the container is not restricted or blocked for daily maintenance.
- Hot Water Solenoid Valve: Hot water must be connected to the unit using the 34" BSP (F/F) Red PVC Hose provided, water supply must not exceed 3 bar pressure and 60°C/140°F. In the case of high pressure a pressure reducing valve must be used. Mains water connections must be made via a WRAS approved isolation valve which follows a WRAS approved double
- Power Lead: The unit must be plugged into a 13 amp rated IP56 socket located below counter level.
- Interconnecting Pipework: All pipework must be clipped and properly supported.
- Stainless Steel Hygiene Stand (Optional Extra): GS1000 unit should be installed on a Stainless Steel Hygiene stand. It can be adjusted up to 2"/50mm in height to allow the unit to be levelled on uneven surfaces and provide access for cleaning.

V6 04/02/2020

Installation Guide - GreaseShield®1000-PF

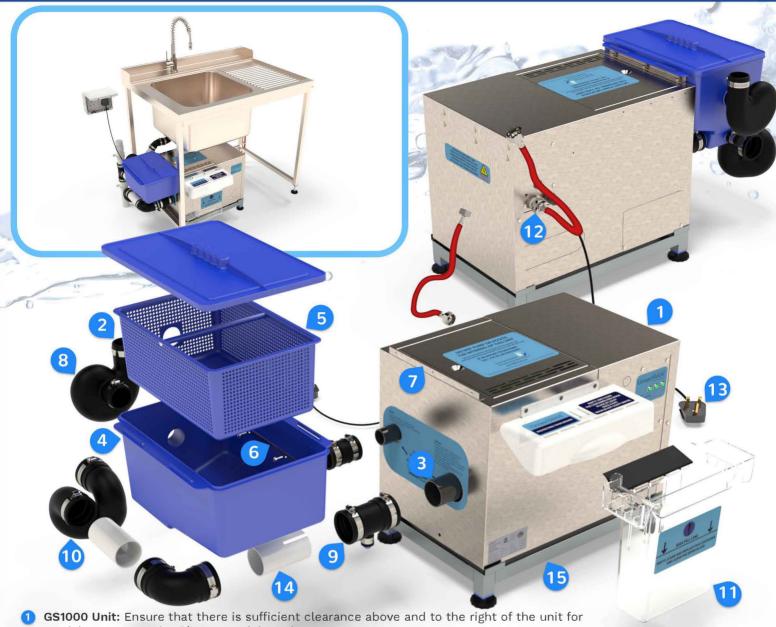

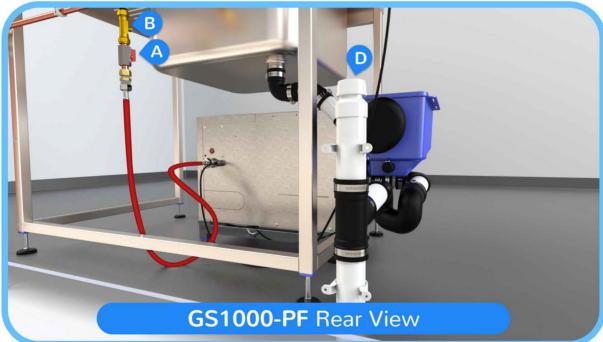

- Make sure the unit is installed on level ground or adjust the stand feet to ensure the unit is level.
- Have a hot water connection available to connect to the unit, if one is not available the unit must be equipped with a Genie H2O to give hot water on demand. Water connection must be made via a WRAS approved isolation valve (A) and double check valve (B).
- Have an IP56 rated socket below counter level available to the unit to plug into. If a genie H2O is required ensure an additional power supply (preferably a fuse spur) is available.
- Ensure all pipe work into and out of the unit has at least a 1 in 40 fall (downwards angle of 1.5°).
- Clean the Pre-Filter basket and FOG container daily.
- An Air Admittance Valve D must be installed after the running trap so a siphon doesn't occur.



- Place the unit in passageways where it can be a hazard or be damaged.
- Open the unit or insert hands into any part of the unit; moving parts can cause injury.
- Stand or place heavy objects on top of the unit.
- **DON'T** Dismantle the unit in any way, only qualified service staff are to access the inside of the unit.

V6 04/02/2020