


Installation Guide - GreaseShield®1000 AST



- 1 GS1000 AST Unit:** Ensure that there is sufficient clearance above and to the right of the unit for servicing purposes (5.9"/150mm minimum).
- 2 Inlet Pipe – 1½"/34mm:** To be piped with a sufficient fall of no less than 1 in 40. A 1¼"/32mm to 1½"/40mm FlexiPlumb adaptor may be required.
- 3 Outlet Pipe – 2"/54mm:** To be piped with a sufficient fall of no less than 1 in 40.
- 4 Sampling Point:** Connected to the outlet of the unit; it is essential in the analysis of effluent leaving the unit.
- 5 Running Trap:** The outlet of unit must be fitted with a running trap to reduce foul smells.
- 6 FOG Container:** Ensure that the container is not restricted or blocked for daily maintenance.
- 7 Solids Container:** Ensure that the container is not restricted or blocked for daily maintenance.
- 8 Hot Water Solenoid Valve:** Hot water must be connected to the unit using the ¾" BSP (F/F) Red PVC Hose provided, water supply must not exceed **3 bar** pressure and **60°C/140°F**. In the case of high pressure a pressure reducing valve must be used. Mains water connections must be made via a WRAS approved isolation valve which follows a WRAS approved double check valve.
- 9 Power Lead:** The unit must be plugged into a **13 amp** rated **IP56** socket located below counter level.
- 10 Interconnecting Pipework:** All pipework must be clipped and properly supported.
- 11 Stainless Steel Hygiene Stand (Optional Extra):** GS1000 AST unit should be installed on a Stainless Steel Hygiene stand. It can be adjusted up to **2"/50mm** in height to allow the unit to be levelled on uneven surfaces and provide access for cleaning.

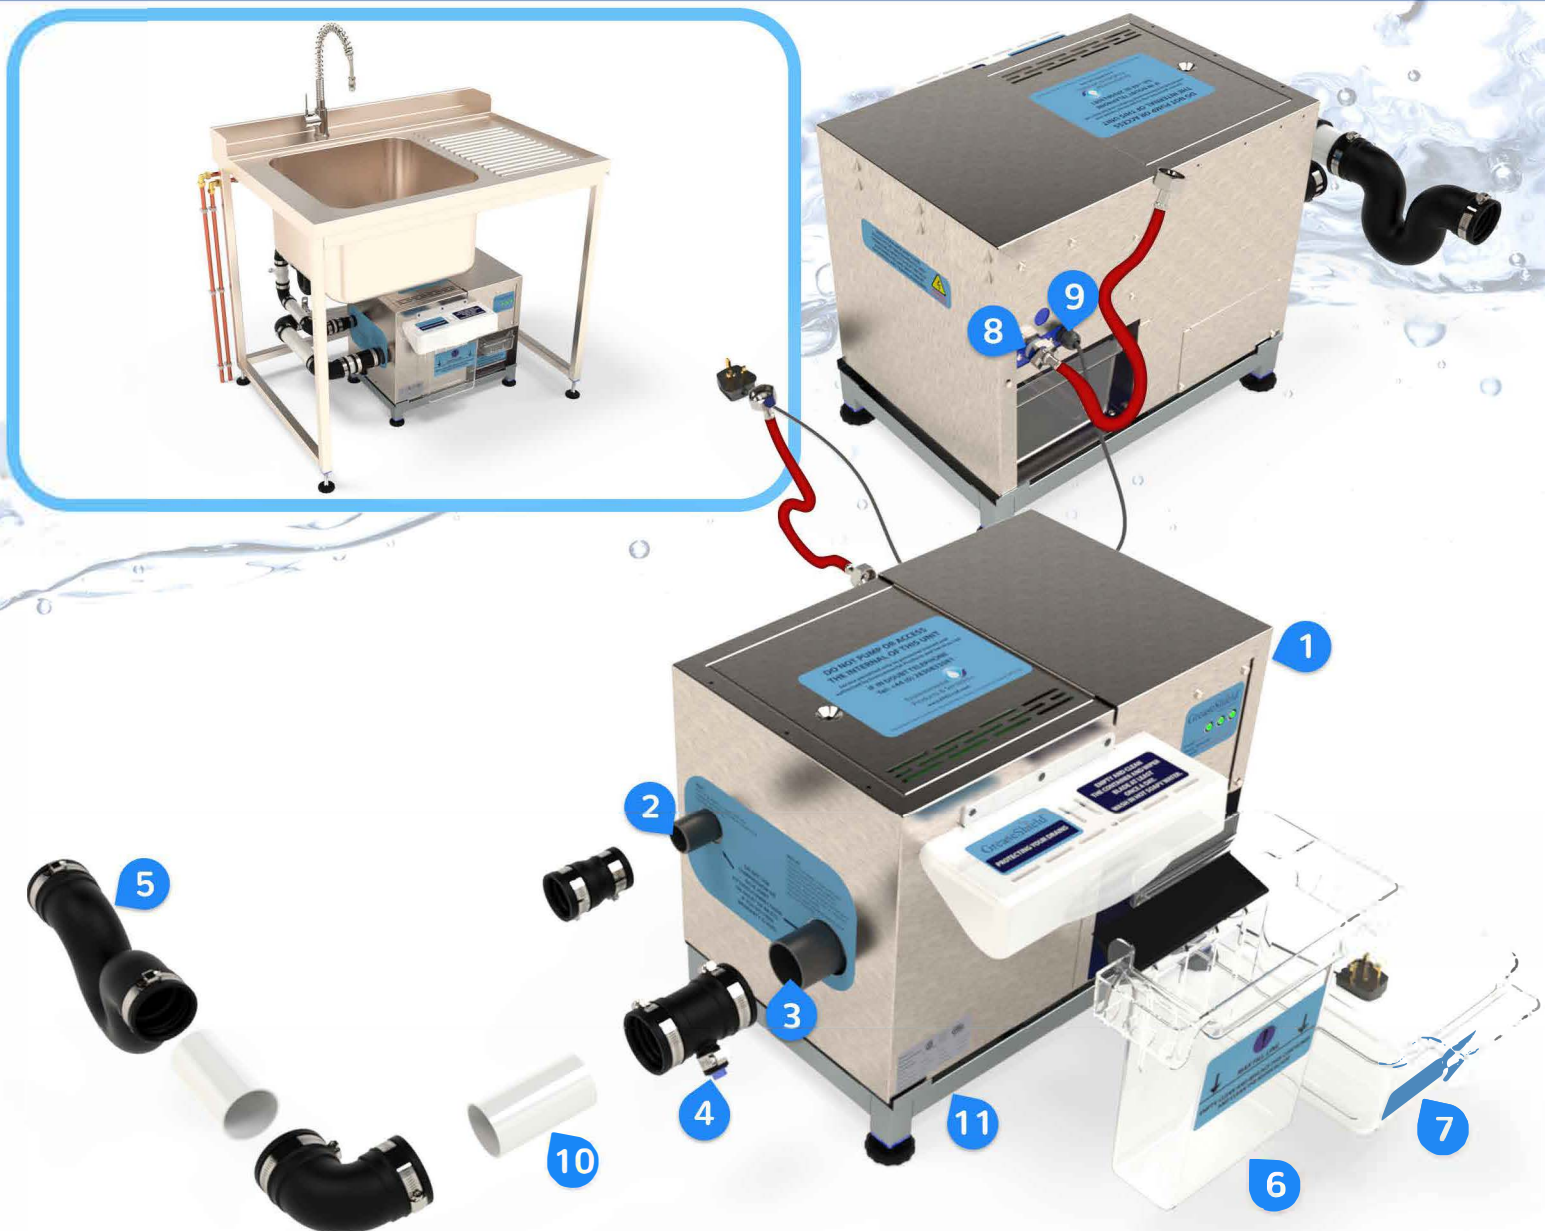

Environmental
Products and Services Ltd

V3 04/02/2020

Installation Guide - GreaseShield®1000 AST



GS1000 AST Front View



GS1000 AST Rear View

- Make sure the unit is installed on level ground or adjust the stand feet to ensure the unit is level.
- Have a hot water connection available to connect to the unit, if one is not available the unit must be equipped with a Genie H2O to give hot water on demand. Water connection must be made via a WRAS approved isolation valve **A** and double check valve **B**.
- Have an IP56 rated socket **C** below counter level available to the unit to plug into. If a genie H2O is required ensure an additional power supply (preferably a fuse spur) is available.
- Ensure all pipe work into and out of the unit has at least a 1 in 40 fall (downwards angle of 1.5°).
- Clean the Solids Container and FOG container daily.
- An Air Admittance Valve **D** must be installed after the running trap so a siphon doesn't occur.



DO



DON'T

- Place the unit in passageways where it can be a hazard or be damaged.
- Open the unit or insert hands into any part of the unit; moving parts can cause injury.
- Stand or place heavy objects on top of the unit.
- Dismantle the unit in any way, only qualified service staff are to access the inside of the unit.

V3 04/02/2020